



EX- SERIES BASS CABINETS

Owner's Manual

EDEN

THE STANDARD IN BASS SOUND.

11/15/2010

CAUTION!

Your ears are your most important piece of equipment. Unfortunately, they cannot be replaced as easily as your other gear. Please take the following warning seriously.

This product, when used in combination with amplification and/or additional loudspeakers may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate at high volume levels or at a level that is uncomfortable. If you experience any discomfort or ringing in the ears or suspect hearing loss, you should consult an audiologist.

Thank you for your purchase of an Eden loudspeaker enclosure. This cabinet has been designed and constructed to give you years of trouble-free service. Please take the time to review this manual and to send in your warranty registration card.

BASIC CONNECTIONS AND OPERATION

There are three speaker connections on the connection panel: one standard ¼ inch jacks and one pair of Neutrik connectors. These connections are all wired together in parallel. This means that any of the connections can accept the input from your amplifier and that the remaining two connections can be used to connect to additional speaker cabinets if desired. NEVER CONNECT TWO AMPLIFIERS TO ONE CABINET. The connection panel also houses the tweeter adjustment potentiometer. This control can boost or cut the level of the tweeter to the level you prefer. When the control is set at 12:00, the system is flat. Turning the control clockwise increases the output of the tweeter; turning it counter clockwise will reduce the output of the tweeter and can, in fact, turn it off. However, you should not operate the system with the tweeter control tuned off for extended periods at high power as it can cause the control to fail. If you desire to have no output from the tweeter, you should disable it by removing the protection fuse described below.

You should make all your connections before turning your amplifier on. Standard ¼ inch plugs are less than ideal in their ability to transfer the signal from your amplifier. This is due to the limited amount of actual contact area in these connections. For best performance, we recommend using “Neutrik” plugs to connect to the cabinet. We also recommend using high quality speaker cables of at least 16 gauge (smaller numbers indicated larger cable). Do not use shielded instrument cable for speaker connections unless you have some reason to want to cause serious damage to your amplifier.

The rear (inside) of the connection panel also houses the crossover and tweeter protection system. This system uses an aircraft-grade light bulb in a circuit that is designed to absorb current that is in excess of the power-handling ability of the tweeter. In cases of very high levels of high frequency information (such as feedback from facing the cabinet with your instrument turned up), the bulb can glow brightly enough to illuminate the interior of the cabinet and shine through

the speaker surrounds. While this is a rather dramatic display of the protection circuit, it should not be done intentionally (find a better way to impress the drummer!) as excess amounts of current will cause the bulb to act like a fuse and fail, requiring replacement before the tweeter will function. Replacement bulbs are available from our factory. In an emergency, an automobile dome light bulb can be used to restore the system. To replace the bulb, simply remove the screws that secure the connection plate to the back of the cabinet. Gently pull the plate out and replace the bulb in its connection clips. If you prefer to operate your system with the tweeter disabled, simply remove the bulb.


BREAK-IN PERIOD

We recommend that you use your Eden cabinet at low to moderate volume levels for approximately two hours before using it in a high volume situation. This will allow the voice coils to “seat” themselves.


CONNECTIONS WITH ADDITIONAL CABINETS

It is important to keep two issues in mind when connecting your Eden cabinet with other cabinets: phase relationships and impedance. Proper parallel connections require the positive and negative speaker terminals to maintain their relationships throughout the system. This means that the positive connection on one cabinet must connect to the positive connection on additional cabinets. The negative connections should be made in a similar manner. Unless you have defective cables, $\frac{1}{4}$ in. connections make incorrect connections highly unlikely.

Parallel Connection

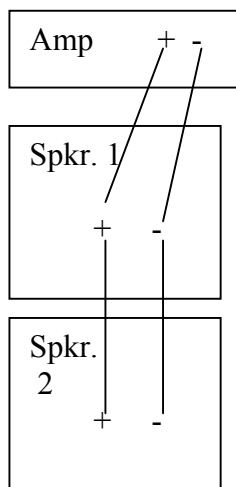

Series Connection

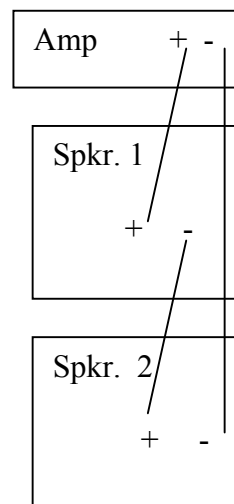

Impedance is a measure of the load your speaker system places on your amplifier. Too great a load (indicated by a lower impedance figure) can damage

your amplifier. Too small a load (indicated by a higher impedance figure) can fail to draw adequate power from your amplifier. Please consult your amplifier manufacturer's literature for impedance recommendations. When you connect speakers in parallel, the load increases as shown below:

Parallel speaker configurations	Total system impedance
Two 8 ohm cabinets	4 ohms
One 8 ohm cabinet and one 4 ohm cabinet	2.6 ohms
Two 4 ohm cabinets	2 ohms
Three 8 ohm cabinets	2.6 ohms
Two 8 ohm cabinets and one 4 ohm cabinet	2 ohms
One 8 ohm cabinet and two 4 ohm cabinets	1.6 ohms

When you connect speakers in series, the load decreases as shown below:

Series speaker configurations	Total system impedance
Two 8 ohm cabinets	16 ohms
One 8 ohm cabinet and one 4 ohm cabinet	12 ohms
Two 4 ohm cabinets	8 ohms
Three 8 ohm cabinets	24 ohms
Two 8 ohm cabinets and one 4 ohm cabinet	20 ohms
One 8 ohm cabinet and two 4 ohm cabinets	16 ohms

As you can see, problems tend to arise when using more than two cabinets. In these cases, a combination of parallel and series wiring may be helpful.

Speaker configurations	Total system impedance
Two 4 ohm cabinets in series plus one 8 ohm cabinet in parallel.	4 ohms
Two 8 ohm cabinets in parallel plus one 4 ohm cabinet in series	8 ohms

POWER HANDLING

Your system can be damaged by too much or too little amplifier power. While the amount of amplifier power reflects the potential for damage, how that power is used (your playing style) is the critical variable. Too small an amplifier, when pushed to its limit, can generate clipping – a signal with enough high frequency distortion to burn up a voice coil. Too large an amplifier, when pushed near its limit, can push the speaker beyond its physical limits. Your playing style determines how much headroom (reserve amplifier power needed to handle short bursts of sound) you will need. Slap style playing is particularly demanding, as short bursts of low frequency information require a great deal of power to be produced accurately without distortion. You should choose an amplifier that delivers adequate power for your playing style without frequent clipping and without exceeding the cabinet's power handling maximum.

Also, keep in mind that simply adding amplifier power will not necessarily increase your volume significantly. The addition of more speakers will have more impact on your overall volume level.

CABINET PLACEMENT

The placement of your cabinet can also have an impact on the amount of bass it produces. Placing the unit on the floor and in a corner each increase the amount of bass that will be perceived. This is due to the reinforcement of bass frequencies by adjacent surfaces. The absence of reinforcing surfaces is the reason why outside settings are so problematic for bass amplification. A system that may be perfectly adequate in a fairly large club can be rather disappointing on an outdoor stage. If you have plans to perform in such a setting and are not confident that the P.A. system can provide you with sufficient reinforcement (both out front and via monitors), you should consider using additional equipment to support your own sound.

MAINTENANCE

Your Eden speaker system is designed to be trouble-free and to require very little maintenance. You should remember that the weakest links in most systems are the solder-less connection points where your plugs and jacks come together. These connections are quite vulnerable to contamination and /or corrosion. Your input jacks, as well as your speaker cable plugs, should be periodically cleaned using a cotton swab with a solvent such as denatured alcohol. On cabinets equipped with casters, you should check to make sure that the screws that hold the caster sockets in place are tight.

CLIMATE AND TRANSPORTATION

Routine temperature extremes (such as cold garages) will not harm your Eden cabinet. You should, however, allow the system to adjust to room temperature before playing it at loud volumes. If your cabinet is going to be bounced around severely during transportation, it is best to avoid loading it with the speaker cones facing up, as this puts added stress on the screws that secure the speakers in the cabinet.

We hope you enjoy your Eden Bass Enclosure. Please feel free to contact us if we can assist you in any way.

SERVICE

In the event of amplifier malfunction, or questions about your unit's operating features, you should contact your Dealer, the factory, or one of our authorized service centers for assistance. Call 847-949-0444 Customer Service for information or to obtain an RA if needed.

Eden Electronics, Inc.
C/o U. S. Music Corp.
444 E. Courtland St.
Mundelein, IL. 60060
(847) 949-0444
(847) 949-8444 (fax)
eden@eden-electronics.com
<http://www.eden-electronics.com>